

LYNX BT Grundkonfiguration

1. Unbind LYNX BT



2. Software reset



3. Bind



4. Restore Default LYNX BT



5. Restore Default OM-1000 BT



Jetzt das Interface auswählen:

RS232 Interface (115200-8-N-1)



Wedge – IBM AT Interface



German



USB-COM Interface (115200-8-N-1)



USB-KBD Interface



German



**Batch Mode (64k) zur
Zwischenspeicherung von Barcodes:**

Disabled



Enabled

